

📍 2019 TOWABLE VEHICLES 📍 PERRY, GEORGIA, SEMINARS 📍 RV TRIP PLANNING

# familyRVing

ENHANCING THE RV LIFESTYLE

JANUARY 2019

## 99... 100... Conventions

From Georgia To North Dakota



VOL. 56 NO. 1 • \$14.99 US  
FamilyRVingmag.com

THIS ARTICLE IS REPRINTED FROM THE JANUARY 2019 ISSUE

"MINOT MAGIC: 100 TIMES THE FUN"











# 2019 TOWING LINEUP

**A guide to 2019-model-year vehicles that manufacturers have indicated can be recreationally towed behind a motorhome without significant modifications.**

**T**he following information is intended to help motorhome owners select a vehicle that is approved by its manufacturer for flat towing. The information was gathered from automobile manufacturers and vehicle owners manuals and pertains only to 2019-model-year vehicles. The information may or may not be correct for earlier or later models. While every attempt has been made to present accurate information, continued vehicle improvements and production-line changes could alter the information and render it out-of-date. Before purchasing any vehicle, consult its owners manual to determine whether the vehicle can be flat towed behind a motorhome and what procedures must be taken to prepare the vehicle for towing. And check with the dealer to ascertain whether any service bulletins have been issued to update the owners manual information as it pertains to recreational towing. Towing surveys for prior years are available at [www.familyrvingmag.com](http://www.familyrvingmag.com).

# 2019 TOWING LINEUP

Make sure the dealership understands that you are looking to tow the vehicle and not to use it to tow a trailer.

The majority of motorhome owners take along another vehicle that they use for transportation once they set up camp. Having a second vehicle eliminates the need to unhook the motorhome when it comes time to explore the local area, and it also provides flexibility for traveling to or parking in places not accessible to motorhomes.

Since 1999, this magazine has published an annual guide intended to assist members in selecting a vehicle to tow. Each guide is specific to one particular model year and focuses on the most popular method of towing — flat towing, or towing four wheels down (as opposed to using a dolly or trailer).

The list that appears on the following pages represents 2019-model-year cars, trucks, and sport-utility vehicles that manufacturers have indicated can be towed four wheels down behind an RV without significant modifications.

## BRAND/MODEL UPDATES

Some vehicles from last year's chart have been discontinued, or the 2019 versions are not towable because of design changes. Discontinued models include Ford Focus, Ford C-Max Hybrid, and Hyundai Elantra GT Sport. In addition, Chevrolet Cruze, Ford Edge, Honda HR-V, Kia Forte, and Nissan Sentra SR Turbo are not flat towable. The Lincoln MKX has been replaced by the Nautilus, which is not flat towable.

Chevrolet has added its Blazer and Traverse SUVs to the list of flat-towable vehicles for 2019, and both are available in front-wheel-drive and all-wheel-drive versions. The Ford Ranger 4x4 pickup truck also can be towed four wheels down.

## BEFORE YOU BUY

Towing information may be difficult to obtain directly from the auto manufacturers, and oftentimes dealership salespeople don't understand the concept of recreational towing or have limited knowledge about which vehicles can be towed four wheels down.

That's why it's important to do your homework when it comes to selecting your next towed vehicle. Think of the "2019 Towing Lineup" as the first step in your discovery process. Also, you may want to check the "Technical Forums" at [FMCA.com](http://FMCA.com) to see whether there have been reports about towing particular vehicles.

Following are some additional guidelines:

**1** Before purchasing a vehicle, make sure the dealership representative with whom you are speaking understands that you are looking to tow the vehicle and not to use it to tow a trailer.

**2** Next, and perhaps the most important step, is to request that you be shown a copy of the vehicle's owners manual. Once you have the manual in hand, find the section that addresses four-wheels-down towing — often under a heading such as "Recreational Towing." (Do not confuse this with "Emergency Towing," which may be possible four wheels down on a limited basis for emergency purposes only.) This section addresses specific guidelines regarding towing procedures, necessary modifications, and safety issues pertaining to the vehicle. Many manufacturers post owners manuals online, and sometimes, updated versions of the printed manuals become available. If you have a particular vehicle in mind, visit the manufacturer's website and click on the "Owners" link to see whether the manual for that vehicle is available to download.

Find out from the dealer, manufacturer, or owners manual how towing will affect the vehicle's warranty.

**3** Once you are confident the vehicle is towable and you are comfortable with the towing setup procedures and guidelines, ask a few more questions before making the purchase. Find out from the dealer, manufacturer, or owners manual how towing will affect the vehicle's warranty. Manufacturers sometimes issue revised instructions for flat towing, so ask the dealer rep whether any service bulletins have been released that relate to towing the vehicle behind a motorhome.

**4** If possible, have the vehicle weighed. Your motorhome has been given a gross combination weight rating (GCWR), which is the maximum allowable combined weight of the motorhome and the attached towed vehicle.





↑ Chevrolet Blazer



↑ Chevrolet Traverse



↑ Ford Ranger

The accompanying charts include approximate curb weights as supplied by the manufacturers; however, optional equipment and accessories can increase the weight of the vehicle. So, make sure that its weight will not push the combined weight above the GCWR. It's also a good idea to weigh your motorhome (see "Weighing Your RV" July 2014, page 40). Because of overloading issues, some motorhomes should not tow anything. In fact, certain motorhomes may need to have their loads lightened before being driven solo.

## TOWING EQUIPMENT

Once you've selected a vehicle for towing, the next step is to purchase a tow bar and base plate. Several companies sell tow bars with varying convenience and safety features. The most important factor when selecting a towing package is to make sure it is rated to handle the weight of the towed vehicle. Have the initial installation done by qualified and experienced personnel. Once installed, check the equipment frequently and use it only in the manner for which it was designed. As with any mechanical gear, proper maintenance can increase the life of towing equipment. However, there comes a time when the equipment must be replaced to prevent a dangerous situation. Frequent inspections will alert you to the need.

When hooking up the towed vehicle, do not let yourself be distracted. Also, get in the habit of checking the towing equipment each time you stop for fuel or to take a break. Walk around the towed vehicle to make sure the tires are properly inflated and do not exhibit any unusual wear patterns. Perform these safety inspections each time you're stopped and you will decrease the chances of a potential problem while on the road.

Safety is the most important issue for motorhomers when they operate their coaches. That's why, for safety's sake, every motorhome owner who tows a vehicle four wheels down should consider using an auxiliary braking system. Many motorhome, chassis, and automobile manufacturers recommend that supplemental brakes be used on any towed vehicle.

A question that is often asked concerning supplemental brakes involves the legal ramifications of not using them. Not all jurisdictions mandate supplemental brakes on towed vehicles, but when it comes to four-wheels-down towing, safety should be paramount. Your motorhome's brakes were designed to stop the weight of the coach. Add several thousand pounds of towed vehicle weight to the equation, and the motorhome's braking system is being asked to do more than it was intended. The extra weight can reduce the effectiveness of the brakes in emergency stopping situations, as well as lead to premature — and potentially costly — wear on the motorhome's braking system.

A supplemental brake provides stopping assistance to the tandem, allowing the towed vehicle's brakes to slow the vehicle and reduce the weight inertia that's pushing forward against the rear of the motorhome. Most of us have never heard anyone say that the brakes on their motorhome stop it too quickly. Nevertheless, many of us have seen what happens when brakes don't work quickly enough.

Although this guide focuses on vehicles that can be flat towed, there is no single best way to tow. Each vehicle and each method has its advantages and disadvantages. If a vehicle you already own or wish to purchase cannot be flat towed, it may be possible to tow it on a dolly or trailer, or have adaptations made to the vehicle to make it towable.

# 2019 TOWING LINEUP

## ➔ READING THE CHART

Based on questions we've received from readers in past years, here are some clarifications regarding information that appears on the accompanying towing chart. A "Yes" in the column under the type of transmission (auto or manual) means that when equipped with that type of transmission, the vehicle is towable; "No" means it is not towable. If the model is not available with a particular transmission, "N/A" appears in the column. The "Approximate Curb Weight" and "Total Length" figures are for a vehicle's base model. "TBD" means that as of press time that piece of information was still to be determined. Keep in mind also that although some vehicles are indicated as being towable, not all trim lines, engine configurations, etc. within that model line may be towable; always refer to the particular vehicle's owners manual to be sure and check for any technical service bulletins.

### BUICK

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
Envision <sup>1</sup>	Yes	N/A	All-wheel drive	None	3,929 lbs.	183.7 in.
Envision <sup>1</sup>	Yes	N/A	Front-wheel drive	None	3,755 lbs.	183.7 in.

<sup>1</sup> To prevent the battery from draining while the vehicle is being towed, remove fuses 29 and 32 (Body Control Module) from the instrument panel fuse block. Use of a shield mounted in front of the vehicle grille could restrict airflow and cause damage to the transmission.

### CADILLAC

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
Escalade <sup>1</sup>	Yes	N/A	Four-wheel drive	None	5,856 lbs.	203.9 in.

<sup>1</sup> Only four-wheel-drive vehicles with a two-speed transfer case that has a Neutral and a four-wheel-drive low setting can be flat towed. Disconnect the negative battery cable at the battery and secure the nut and bolt. Cover the negative battery post with nonconductive material to prevent contact with the negative battery terminal. Use of a shield mounted in front of the vehicle grille could restrict airflow and damage the transmission.



⬆ Buick Envision



⬆ Cadillac Escalade



↑ Chevrolet Colorado

## CHEVROLET

MODEL	TRANSMISSION AUTO    MANUAL		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
Blazer	GM has indicated the Blazer is flat towable; however, vehicle specifications were not available at press time.					
Colorado <sup>1,2,3</sup>	Yes	No	Four-wheel drive	None	4,167 lbs.	212.7 in.
Equinox 2.0-liter gas/1.6-liter diesel <sup>1,5,6</sup>	Yes	N/A	All-wheel drive	65 mph/None	3,610 lbs.	183.1 in.
Equinox 1.5-liter gas/2.0-liter gas/1.6-liter diesel <sup>1,5,6</sup>	Yes	N/A	Front-wheel drive	65 mph/None	3,274 lbs.	183.1 in.
Malibu 2.0-liter <sup>1,3,5</sup>	Yes	N/A	Front-wheel drive	65 mph/None	3,223 lbs.	193.8 in.
Silverado 1500 <sup>1,2,3</sup>	Yes	N/A	Four-wheel drive	None	4,686 lbs.	210.7 in.
Silverado 1500LD <sup>1,2,3</sup>	Yes	N/A	Four-wheel drive	None	4,948 lbs.	205.5 in.
Silverado 2500HD/3500HD <sup>1,2,3</sup>	Yes	N/A	Four-wheel drive	None	6,382 lbs.	230.0 in.
Sonic Hatchback <sup>1,5,7</sup>	Yes	Yes	Front-wheel drive	65 mph/None	2,819 lbs.	159.8 in.
Sonic Sedan <sup>1,5,7</sup>	Yes	Yes	Front-wheel drive	65 mph/None	2,796 lbs.	173.9 in.
Spark <sup>1,3</sup>	No	Yes	Front-wheel drive	70 mph/None	2,246 lbs.	143.1 in.
Suburban <sup>1,2,3</sup>	Yes	N/A	Four-wheel drive	None	5,808 lbs.	224.4 in.
Tahoe <sup>1,2,3</sup>	Yes	N/A	Four-wheel drive	None	5,602 lbs.	204.0 in.
Traverse <sup>1,5,8</sup>	Yes	N/A	All-wheel drive	65 mph/None	4,504 lbs.	204.3 in.
Traverse <sup>1,5,8</sup>	Yes	N/A	Front-wheel drive	65 mph/None	4,362 lbs.	204.3 in.

<sup>1</sup> Use of a shield mounted in front of the vehicle grille could restrict airflow and cause damage to the transmission.

<sup>2</sup> Only four-wheel-drive vehicles with a two-speed transfer case that has a Neutral and four-wheel-drive low setting can be towed four wheels down.

<sup>3</sup> Disconnect the negative battery cable at the battery and secure the nut and bolt. Cover the negative battery post with nonconductive material to prevent contact with the negative battery terminal.

<sup>4</sup> To prevent the battery from draining while the vehicle is being towed, remove fuses F15, F23, F26, and F27 from the instrument panel fuse block.

<sup>5</sup> A vehicle equipped with an automatic transmission should be run at the beginning of each day and at each RV fuel stop for about five minutes.

<sup>6</sup> It is required to charge the battery of the towed vehicle during recreational towing.

<sup>7</sup> To prevent the battery from draining while the vehicle is being towed, remove the DLIS fuse from the instrument panel fuse block. For keyless access vehicles, to prevent the battery from draining while the vehicle is being towed, remove the BCM1 and BCM2 fuses from the instrument panel fuse block, and remove fuse 7 from the engine compartment fuse block.

<sup>8</sup> To prevent the battery from draining while the vehicle is being towed, remove fuses F3 (the DC transformer 1 fuse), and F59 (the engine control module battery fuse) from the engine compartment fuse block.



# 2019 TOWING LINEUP



↑ Dodge Durango

## DODGE

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
<b>Durango<sup>1</sup></b>	Yes	N/A	All-wheel drive	None	5,381 lbs.	201.2 in.

<sup>1</sup> Only all-wheel-drive models equipped with a two-speed transfer case can be towed four wheels down. Refer to the towing instructions in the owners manual.



↑ Fiat 500c

## FIAT

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
<b>500, 500c</b>	No	Yes	Front-wheel drive	65 mph/None	2,505 lbs.	139.6 in.
<b>500 Abarth, 500c Abarth</b>	No	Yes	Front-wheel drive	65 mph/None	2,512 lbs.	144.4 in.





↑ Ford Fusion

## FORD

MODEL	TRANSMISSION AUTO	MANUAL	DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
<b>Expedition 4x4<sup>1</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	5,623 lbs.	210.0 in.
<b>Expedition Max 4x4<sup>1</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	5,794 lbs.	221.9 in.
<b>Explorer 3.5-liter Duratec/3.5-liter EcoBoost<sup>2,3</sup></b>	Yes	N/A	Four-wheel drive	65 mph/None	4,629 lbs.	198.7 in.
<b>Explorer 3.5-liter Duratec<sup>2,3</sup></b>	Yes	N/A	Front-wheel drive	65 mph/None	4,443 lbs.	198.7 in.
<b>F-150 4x4<sup>4</sup></b>	Yes	N/A	Four-wheel drive	None	4,330 lbs.	209.3 in.
<b>F-250/350/450/550 4x4<sup>5</sup></b>	Yes	N/A	Four-wheel drive	None	6,106 lbs.	231.8 in.
<b>Fiesta four-door sedan<sup>2,6</sup></b>	Yes	Yes	Front-wheel drive	70 mph/None	2,578 lbs.	173.5 in.
<b>Fiesta five-door hatchback<sup>2,6,7</sup></b>	Yes	Yes	Front-wheel drive	70 mph/None	2,537 lbs.	159.7 in.
<b>Flex 3.5-liter Duratec/3.5-liter EcoBoost<sup>2,3</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	4,637 lbs.	201.8 in.
<b>Flex 3.5-liter Duratec<sup>2,3</sup></b>	Yes	N/A	Front-wheel drive	65 mph/None	4,439 lbs.	201.8 in.
<b>Fusion 2.7-liter EcoBoost<sup>3</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	4,165 lbs.	191.8 in.
<b>Fusion Energi<sup>8</sup></b>	Yes	N/A	Front-wheel drive	70 mph/None	3,994 lbs.	191.8 in.
<b>Fusion Hybrid<sup>8</sup></b>	Yes	N/A	Front-wheel drive	70 mph/None	3,668 lbs.	191.8 in.
<b>Ranger 4x4<sup>4</sup></b>	Yes	N/A	Four-wheel drive	None	4,354 lbs.	210.8 in.
<b>Taurus 3.5-liter/3.5-liter EcoBoost<sup>3</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	4,140 lbs.	202.9 in.
<b>Taurus 3.5-liter<sup>3</sup></b>	Yes	N/A	Front-wheel drive	65 mph/None	3,917 lbs.	202.9 in.

<sup>1</sup> Must be equipped with 4x4 Low. Place the transfer case in the neutral position and engage the four-wheel-down towing feature. See owners manual.

<sup>2</sup> In vehicles with automatic transmission, disconnect the negative (black) cable from the battery before towing. After towing, start the engine within 15 minutes of reconnecting the battery cable.

<sup>3</sup> Start the engine and allow it to run for five minutes at the start of each day and every six hours thereafter.

<sup>4</sup> Place the transfer case and transmission in the neutral position and engage the four-wheel-down towing feature. See owners manual.

<sup>5</sup> See owners manual for towing procedure for vehicles equipped with a manual-shift transfer case or an electronic-shift transfer case.

<sup>6</sup> Transmission must be in neutral during four-wheel-down towing, and ignition must be on before shifting into neutral.

<sup>7</sup> The Fiesta ST cannot be towed four wheels down.

<sup>8</sup> Start the engine and allow it to run for a few minutes at the start of each day and every six hours or fewer.

# 2019 TOWING LINEUP



↑ GMC Sierra 1500



↑ Honda Accord Sport 2.0T

## GMC

MODEL	TRANSMISSION AUTO	MANUAL	DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
<b>Acadia 3.6-liter<sup>1,2,4</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	4,207 lbs.	193.6 in.
<b>Acadia 3.6-liter<sup>1,2,4</sup></b>	Yes	N/A	Front-wheel drive	65 mph/None	4,031 lbs.	193.6 in.
<b>Canyon<sup>1,3</sup></b>	Yes	No	Four-wheel drive	None	4,140 lbs.	212.4 in.
<b>Sierra 1500<sup>1,3</sup></b>	Yes	N/A	Four-wheel drive	None	4,738 lbs.	210.8 in.
<b>Sierra 2500HD/3500HD<sup>1,3</sup></b>	Yes	N/A	Four-wheel drive	None	6,382 lbs.	230.0 in.
<b>Yukon<sup>1,3</sup></b>	Yes	N/A	Four-wheel drive	None	5,743 lbs.	203.9 in.
<b>Yukon XL<sup>1,3</sup></b>	Yes	N/A	Four-wheel drive	None	5,965 lbs.	224.4 in.

<sup>1</sup> Use of a shield mounted in front of the vehicle grille could restrict airflow and cause damage to the transmission.

<sup>2</sup> Before flat towing, be sure the transmission fluid is at the proper level. The vehicle should be run at the beginning of each day and at each RV fuel stop for about five minutes.

<sup>3</sup> Only vehicles that have a two-speed transfer case with a Neutral and a four-wheel-drive low setting can be towed four wheels down. Disconnect the negative battery cable and secure the nut and bolt. Cover the negative battery post with nonconductive material to prevent contact with the negative battery terminal.

<sup>4</sup> Once the destination has been reached, start the engine and let it idle for more than three minutes before driving the vehicle.

## HONDA

MODEL	TRANSMISSION AUTO	MANUAL	DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
<b>Accord Sport, Sport 2.0T<sup>1</sup></b>	No	Yes	Front-wheel drive	65 mph/None	3,155 lbs.	192.2 in.
<b>Civic Coupe Sport</b>	No	Yes	Front-wheel drive	65 mph/None	2,826 lbs.	177.3 in.
<b>Civic Sedan LX, Sport</b>	No	Yes	Front-wheel drive	65 mph/None	2,762 lbs.	182.7 in.
<b>Fit</b>	No	Yes	Front-wheel drive	65 mph/None	2,522 lbs.	161.4 in.

<sup>1</sup> If the vehicle is towed more than eight hours in one day, follow special instructions in the owners manual.



## HYUNDAI

MODEL	TRANSMISSION AUTO    MANUAL		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
<b>Accent</b>	No	Yes	Front-wheel drive	None	2,502 lbs.	172.6 in.
<b>Elantra</b>	No	Yes	Front-wheel drive	None	2,822 lbs.	181.9 in.
<b>Elantra GT</b>	No	Yes	Front-wheel drive	None	2,901 lbs.	170.9 in.
<b>Veloster</b>	No	Yes	Front-wheel drive	None	2,701 lbs.	166.9 in.

## JEEP

MODEL	TRANSMISSION AUTO    MANUAL		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
<b>Cherokee<sup>1</sup></b>	Yes	N/A	Four-wheel drive	None	3,953 lbs.	182.0 in.
<b>Grand Cherokee<sup>2</sup></b>	Yes	N/A	Four-wheel drive	None	4,625 lbs.	189.8 in.
<b>Wrangler</b>	Yes	Yes	Four-wheel drive	None	3,955 lbs.	166.8 in.
<b>Wrangler 4-door</b>	Yes	Yes	Four-wheel drive	None	4,200 lbs.	188.4 in.

<sup>1</sup> Only four-wheel-drive vehicles with a two-speed power transfer unit can be towed four wheels down. See owners manual.

<sup>2</sup> Only four-wheel-drive vehicles equipped with Quadra-Trac II/Quadra-Drive II (two-speed transfer case) can be towed four wheels down.

## KIA

MODEL	TRANSMISSION AUTO    MANUAL		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
<b>Rio LX</b>	No	Yes	Front-wheel drive	None	2,648 lbs.	172.6 in.
<b>Soul Base</b>	No	Yes	Front-wheel drive	None	2,884 lbs.	163.0 in.



↑ Hyundai Accent



↑ Jeep Grand Cherokee



↑ Kia Soul

# 2019 TOWING LINEUP



Lincoln Navigator

Nissan Frontier

## LINCOLN

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
<b>MKT 3.5-liter<sup>1,2</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	5,036 lbs.	207.6 in.
<b>MKZ 3.0-liter<sup>1</sup></b>	Yes	N/A	All-wheel drive	65 mph/None	4,191 lbs.	194.1 in.
<b>MKZ 3.0-liter<sup>1</sup></b>	Yes	N/A	Front-wheel drive	65 mph/None	4,023 lbs.	194.1 in.
<b>MKZ Hybrid<sup>1</sup></b>	Yes	N/A	Front-wheel drive	65 mph/None	3,871 lbs.	194.1 in.
<b>Navigator<sup>3</sup></b>	Yes	N/A	Four-wheel drive	None	5,909 lbs.	210.0 in.
<b>Navigator L<sup>3</sup></b>	Yes	N/A	Four-wheel drive	None	6,018 lbs.	221.9 in.

<sup>1</sup> Start the engine and allow it to run for five minutes at the beginning of each day and every six hours thereafter.

<sup>2</sup> Disconnect the negative (black) cable from the battery. Start the engine within 15 minutes of reconnecting the battery cable.

<sup>3</sup> Must be equipped with two-speed transfer case with 4x4 LOW. Place the transfer case in the neutral position and engage the four-wheel-down towing feature. See owners manual.

## NISSAN

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
<b>370Z Coupe<sup>1</sup></b>	No	Yes	Rear-wheel drive	70 mph/500 mi.	3,333 lbs.	167.5 in.
<b>370Z Nismo<sup>1</sup></b>	No	Yes	Rear-wheel drive	70 mph/500 mi.	3,457 lbs.	170.5 in.
<b>Frontier<sup>1,2</sup></b>	No	Yes	Four-wheel drive	60 mph/500 mi.	4,451 lbs.	205.5 in.
<b>Frontier<sup>1</sup></b>	No	Yes	Rear-wheel drive	60 mph/500 mi.	4,225 lbs.	205.5 in.
<b>Sentra<sup>1</sup></b>	No	Yes	Front-wheel drive	50 mph/500 mi.	2,851 lbs.	182.1 in.
<b>Sentra Nismo<sup>1</sup></b>	No	Yes	Front-wheel drive	50 mph/500 mi.	3,022 lbs.	183.6 in.
<b>Versa Sedan<sup>1</sup></b>	No	Yes	Front-wheel drive	70 mph/500 mi.	2,395 lbs.	175.4 in.

<sup>1</sup> After towing 500 miles, start and idle the engine with the transmission in Neutral for two minutes.

<sup>2</sup> Always flat tow four-wheel-drive Frontier with the transfer case in the 2 H/L position.



# 2019 TOWING LINEUP




↑ Ram 1500



↑ Toyota Yaris

## ➔ WHEN A TOWED VEHICLE MUST BE MODIFIED

Although many vehicles are not approved by their manufacturers for towing four wheels down behind a motorhome, that doesn't necessarily eliminate the possibility of such vehicles being flat towed. If you have a vehicle you enjoy driving but it is not approved for towing four wheels down, the following products from FMCA commercial-member companies may offer a solution.

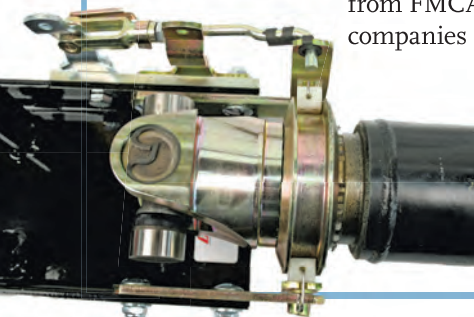

➔ The Superior Driveline Drive Shaft Coupling can be installed on certain vehicles to make them flat towable.

**The Superior Driveline Drive Shaft Coupling** is the answer for most rear-wheel-drive and four-wheel-drive vehicles with automatic or manual transmissions. The system disconnects the driveshaft at the rear U-joint and is controlled by a heavy-duty cable from the driver's seat, so it's not necessary to get under the vehicle. Simply pull the cable handle — much like the old choke cables — and disengage the steering wheel lock, and you're ready to tow. To re-engage the driveshaft, push in the cable handle using a designated procedure, and you're ready to drive. The cost of a Superior Driveline Drive Shaft Coupling ranges from \$765 to \$1,600, depending on the vehicle. Installation charges are extra.

**Superior Driveline**  
1501 N.E. Broadway Ave., Suite 7  
Des Moines, IA, 50313  
(855) 447-3626  
[www.superiordriveline.com](http://www.superiordriveline.com)

## RAM

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
<b>Ram 1500 Classic<sup>1</sup></b>	Yes	N/A	Four-wheel drive	None	4,752 lbs.	209.0 in.
<b>Ram 1500<sup>1</sup></b>	Yes	N/A	Four-wheel drive	None	4,989 lbs.	228.9 in.
<b>Ram 2500HD</b>	The Ram 2500 has been listed as flat towable every year since 2003; however, information about the 2019 vehicle was unavailable at press time.					
<b>Ram 3500HD</b>	The Ram 3500 has been listed as flat towable every year since 2003; however, information about the 2019 vehicle was unavailable at press time.					

<sup>1</sup> See detailed procedure in the owners manual.

## TOYOTA

MODEL	TRANSMISSION		DRIVE CONFIGURATION	SPEED/DISTANCE LIMITS	APPROX CURB WEIGHT	TOTAL LENGTH
	AUTO	MANUAL				
<b>Corolla SE<sup>1</sup></b>	No	Yes	Front-wheel drive	None	2,860 lbs.	183.1 in.
<b>Yaris Sedan<sup>1</sup></b>	No	Yes	Front-wheel drive	None	2,385 lbs.	171.2 in.
<b>Yaris Liftback<sup>1</sup></b>	No	Yes	Front-wheel drive	None	2,315 lbs.	155.5 in.

<sup>1</sup> After towing, start the engine and let it idle for at least three minutes before driving the vehicle.

➔ The Remco Power RV Lube Pump kit lubricates the automatic transmission of a front-wheel-drive vehicle during flat towing.



system, so you need not worry about a dead battery in the towed vehicle. The cost of a Remco Power RV Lube Pump ranges from \$1,175 to \$1,895.

### Remco Industries

4605 County Road 82 S.E.

Alexandria, MN 56308

(800) 228-2481

[www.remcoindustries.com/towing/](http://www.remcoindustries.com/towing/) ●

**The Remco Power RV Lube Pump** is used on front-wheel-drive vehicles to prevent damage to automatic transmissions. When a vehicle equipped with an automatic transmission is driven, the transmission is lubricated by an engine-driven fluid pump. When the vehicle is towed, this pump does not operate. The Lube Pump provides a reliable lubrication system for the transmission while the vehicle is being towed. To tow the vehicle, connect the wiring cable between the motorhome and the towable. The new electronic monitor/control panel monitors the entire system while towing and alerts you if a problem arises. The panel is also where the system is switched on and off. The Lube Pump is powered by the motorhome's electrical